

General Ecu Connections

Viewing Front Ecu Socket

Viewing Rear Ecu Socket

1	2	3	4	5	6	7	8	9	10	11	12	13				
14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30

1	2	3	4	5
6	7	8	9	10
11	12			

